


Mounting Bracket Assembly Instructions for Primechair®, Priide GoGo Scooter® and Rascal® Power Chairs

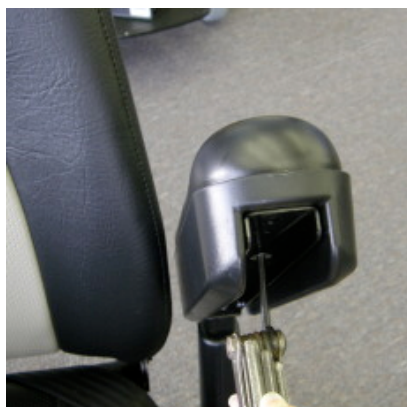

1. Raise arm and locate screw closest to end of armrest. Remove screw using an Allen Wrench



2. Insert screw into hole in mounting bracket and reattach into underside of armrest using Allen Wrench.



3. Snap convenience accessory into mounting bracket.

Enjoy!

