



Mounting Bracket Assembly Instructions for Shoprider® Wheelchairs

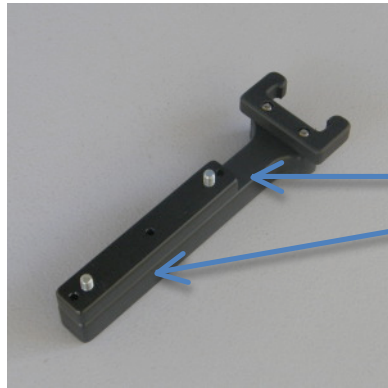

1. Bracket furnished with two 6 mm screws.

2. Locate mounting holes under armrest.

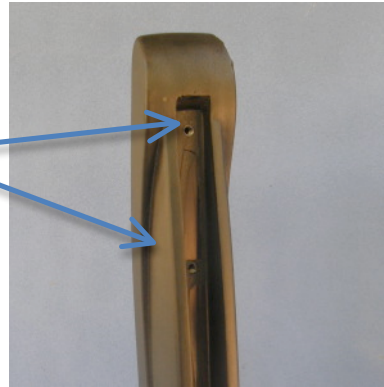

3. Mount bracket to arm with supplied screws. Snap convenience accessory into mounting bracket.

Enjoy!